

Kramer Electronics, Ltd.



USER MANUAL

Model:

VS-169TP

16x9 CAT 5 Matrix Switcher

Contents

1	Introduction	1
2	Getting Started	1
2.1	Achieving the Best Performance	2
2.2	Safety Instructions	2
2.3	Recycling Kramer Products	2
2.4	Quick Start	3
3	Overview	4
3.1	Shielded Twisted Pair (STP) / Unshielded Twisted Pair (UTP)	5
4	Your VS-169TP 16x9 CAT 5 Matrix Switcher	5
4.1	Using the IR Transmitter	10
5	Installing the VS-169TP in a Rack	11
5.1	Wiring the CAT 5 LINE IN / LINE OUT RJ-45 Connectors	12
6	Connecting the VS-169TP 16x9 CAT 5 Matrix Switcher	12
6.1	Connecting the RS-232 Ports	15
6.1.1	Connect the Local RS-232 Ports	15
6.1.2	Connect the Control RS-232 Ports	15
6.2	Setting the DIP-switches	15
6.2.1	Setting the Machine #	16
7	Control the VS-169TP 16x9 CAT 5 Matrix Switcher	17
7.1	Controlling via the RS-232 Interface	17
7.2	Controlling via the RS-485 Interface	18
7.3	Controlling via the ETHERNET	19
7.3.1	Connecting the ETHERNET Port directly to a PC (Crossover Cable)	19
7.3.2	Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)	20
7.3.3	Control Configuration via the Ethernet Port	20
8	Understanding the VS-169TP 16x9 CAT 5 Matrix Switcher	21
8.1	Transmitting the RS-232 Signal	21
9	Operating the VS-169TP 16x9 CAT 5 Matrix Switcher	23
9.1	Switching Inputs #1 and #2 between local and remote	23
9.2	The STATUS 7-Segment Display	24
9.3	Switching an Input to an Output	24
9.3.1	Switching one Input to all Outputs	24
9.3.2	Clearing an Output	25
9.3.3	Clearing all the Outputs	25
9.4	Confirming Settings	26
9.4.1	Toggling between the At Once and Confirm Modes	26
9.4.2	Confirming a Switching Action	26
9.5	Storing/Recalling Input/Output Configurations	27

9.5.1	Storing an Input/Output Configuration	27
9.5.2	Recalling an Input/Output Configuration	27
9.6	Locking the Front Panel	28
9.7	Choosing the Follow or Breakaway Operation Mode	28
9.7.1	Follow Mode Operation	28
9.7.2	Breakaway Mode Operation	29
10	Flash Memory Upgrade	31
10.1	Switcher Firmware Upgrade	31
10.2	Ethernet Firmware Upgrade	31
10.2.1	Downloading from the Internet	31
10.2.2	Connecting the PC to the RS-232 Port	31
10.2.3	Upgrading Firmware	32
11	Technical Specifications	33
12	Hex Table	33
13	Kramer Protocol 2000	35

Figures

Figure 1:	VS-169TP 16x9 CAT 5 Matrix Switcher Front Panel	6
Figure 2:	VS-169TP 16x9 CAT 5 Matrix Switcher Rear Panel	8
Figure 3:	CAT 5 PINOUT	12
Figure 4:	Connecting the VS-169TP 16x9 CAT 5 Matrix Switcher	14
Figure 5:	DIP-switch Settings	15
Figure 6:	Controlling the VS-169TP via the RS-232 Interface	17
Figure 7:	Controlling the VS-169TP via the RS-485 Interface	18
Figure 8:	Local Area Connection Properties Window	19
Figure 9:	Internet Protocol (TCP/IP) Properties Window	20
Figure 10:	Switching an Input to an Output	22
Figure 11:	Switching an Input to Several Outputs	22
Figure 12:	MATRIX STATUS Display in the Follow Mode	23
Figure 13:	7-segment Display During Normal Operation	24
Figure 14:	7-segment Display Following Power ON	24
Figure 15:	Operating in the RS-232 (Rx) Breakaway Mode	30
Figure 16:	MATRIX STATUS Display in the RS-232 (Rx) Breakaway Mode	30
Figure 17:	The KFR-Programmer Window	32

Tables

Table 1:	VS-169TP 16x9 CAT 5 Matrix Switcher Front Panel Functions	7
Table 2:	VS-169TP 16x9 CAT 5 Matrix Switcher Rear Panel Functions	9
Table 3:	CAT 5 PINOUT	12
Table 4:	DIP-switch Settings	15
Table 5:	Machine # DIP-switch Settings	16
Table 6:	VS-169TP Technical Specifications	33
Table 7:	VS-169TP Hex Table	34

Contents

Table 8: Protocol Definitions	35
Table 9: Instruction Codes for Protocol 2000	36

1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 1,000-plus different models now appear in 11 groups¹ that are clearly defined by function.

Thank you for purchasing the Kramer **VS-169TP** *16x9 CAT 5 Matrix Switcher*. This unique matrix switcher, which utilizes cheap twisted pair cabling often pre-installed in buildings these days, routes and distributes signals both from a local source and at extended ranges (via twisted pair). It is designed especially for installations where a high level of control possibilities from extended distances is required. Typical uses include presentation and multimedia applications, as well as long-range graphics distribution and control for schools, hospitals, security, and stores.

The package includes the following:

- The **VS-169TP** *16x9 CAT 5 Matrix Switcher*
- Kramer **RC-IR2** Infrared Remote Control Transmitter (including the required battery and a separate user manual³)
- Windows®-based Kramer control software
- Power cord², rack “ears”, and this user manual³

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual



Go to <http://www.kramerelectronics.com> to check for up-to-date user manuals, application programs, and to check if firmware upgrades are available (where appropriate).

¹ GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Routers; GROUP 3: Control Systems;

GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products;

GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity;

GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Products

² We recommend that you use only the power cord supplied with this device

³ Download up-to-date Kramer user manuals from our Web site at <http://www.kramerelectronics.com>

2.1 Achieving the Best Performance

To achieve the best performance:

- Use only good quality connection cables (we recommend Kramer high-performance, high-resolution cables) to avoid interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Do not secure the cables in tight bundles or roll the slack into tight coils
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality
- Position your **VS-169TP** away from moisture, excessive sunlight and dust



This equipment is to be used only inside a building. It may only be connected to other equipment that is installed inside a building.

2.2 Safety Instructions



Caution: There are no operator serviceable parts inside the unit

Warning: Use only the power cord that is supplied with the unit

Warning: Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only


Warning: Disconnect the power and unplug the unit from the wall before installing

2.3 Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at <http://www.kramerelectronics.com/support/recycling/>.

2.4 Quick Start

This quick start chart summarizes the basic setup and operation steps.

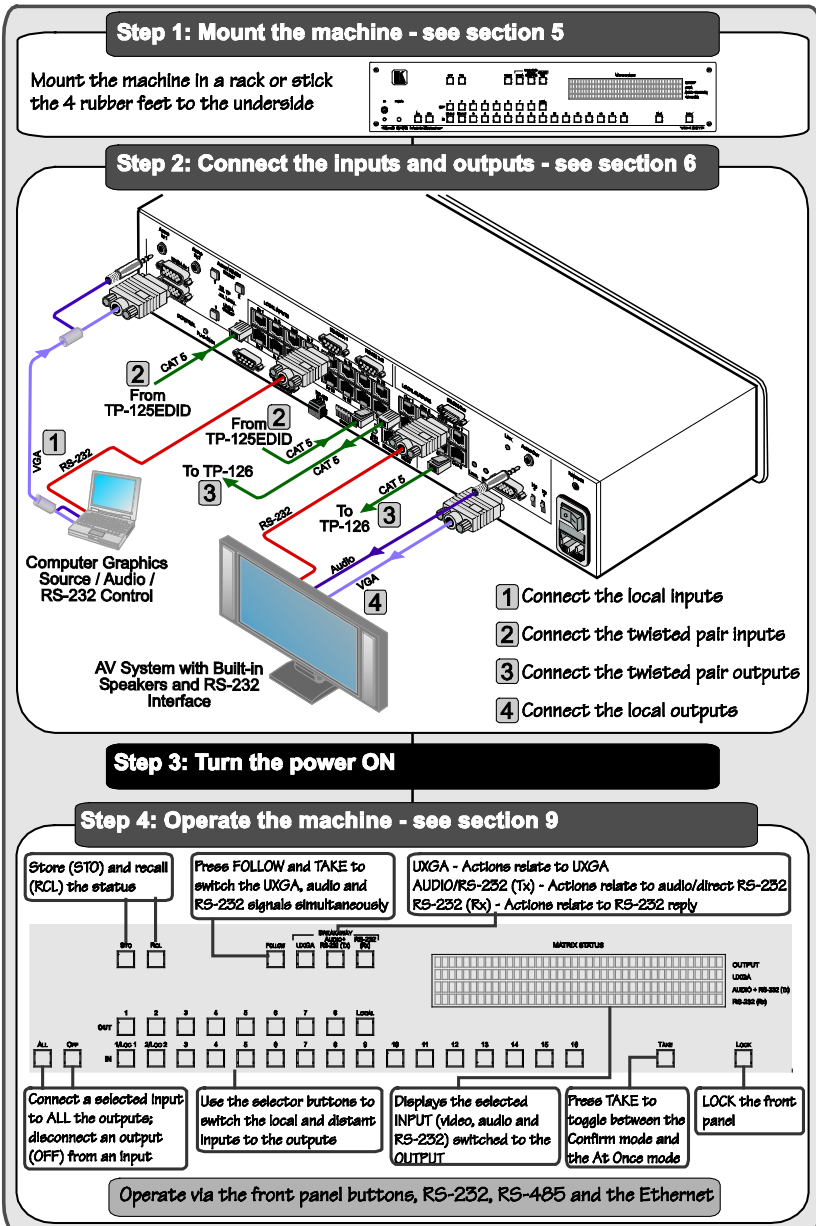

3 Overview

The **VS-169TP** is a high-performance matrix switcher for video signals up to WUXGA/1080p, analog stereo / S/PDIF audio and bidirectional RS-232 signals, over twisted pair CAT 5 cable. The unit can route any input to any or all outputs simultaneously.

More specifically, the **VS-169TP** features:

- Compatibility with most Kramer twisted pair transmitters/receivers
- 16 inputs for remote connection to CAT 5 transmitters and eight outputs for remote connection to CAT 5 receivers
- Two switchable local inputs (built-in transmitters) and one local output (a built-in receiver) allowing direct connection of the signals (UXGA, audio and RS-232) for the units located near to the switcher
- Follow or breakaway switching for all signals (UXGA, audio, RS-232)
- 48kHz/24-bit analog/digital conversion for broadcast quality stereo audio
- Baud rate of up to 19,200 for full-duplex RS-232 together with audio; one source to multiple destination for straight RS-232 signal and priority system or user-defined destination for reply signal
- Four-line LCD display for separate route indication of video, audio, or RS-232
- Control via front panel pushbuttons, RS-232, RS-485, IP and IR remote control
- 15 user-programmable presets for quick-change configurations
- Kramer 2000 communication protocol
- 100-240V AC worldwide power supply
- Standard 19" rack mount size – 2U

3.1 Shielded Twisted Pair (STP) / Unshielded Twisted Pair (UTP)

We recommend that you use shielded twisted pair (STP) cable. There are different levels of STP cable available, and we advise you to use the best quality STP cable that you can afford. Our non-skew-free cable, Kramer **BC-STP** is intended for digital signals and for analog signals where skewing is not an issue. For cases where there is skewing, our UTP skew-free cable, Kramer **BC-XTP**, may be used. Bear in mind, though, that we advise using STP cables where possible, since the compliance to electromagnetic interference was tested using those cables.

Although unshielded twisted pair (UTP) cable might be preferred for long range applications, the UTP cable should be installed far away from electric cables, motors and so on, which are prone to create electrical interference. However, since the use of UTP cable might cause inconformity to electromagnetic standards, Kramer does not commit to meeting the standard with UTP cable.

4 Your VS-169TP 16x9 CAT 5 Matrix Switcher

[Figure 1](#), [Table 1](#), [Figure 2](#) and [Table 2](#) define the **VS-169TP**.

Your VS-169TP 16x9 CAT 5 Matrix Switcher

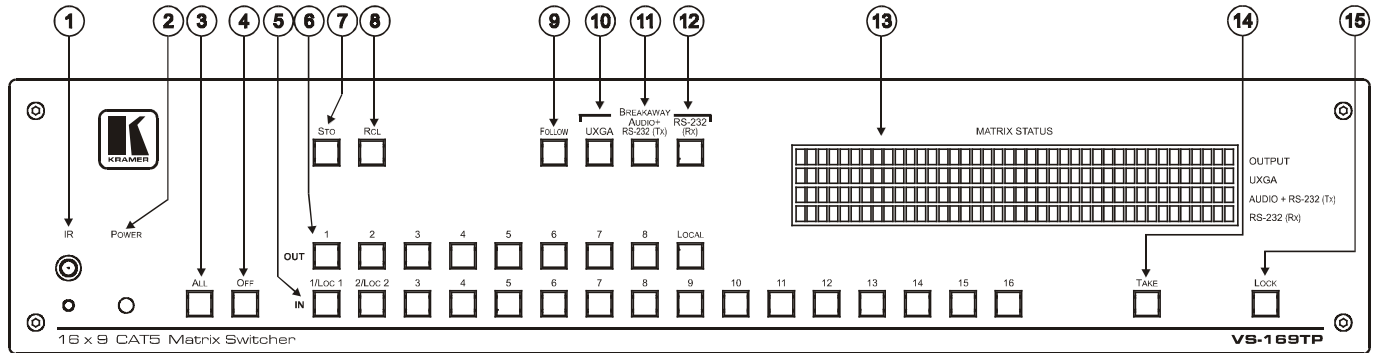


Figure 1: VS-169TP 16x9 CAT 5 Matrix Switcher Front Panel

Table 1: VS-169TP 16x9 CAT 5 Matrix Switcher Front Panel Functions

#	Feature		Function
1	IR Receiver/IR LED		The red LED is illuminated when receiving signals from the infrared remote control transmitter
2	POWER LED		Illuminates green when receiving power
3	ALL Button		Pressing ALL followed by an IN button, connects that input to all outputs ¹
4	OFF Button		Press an OUT selector button and then an OFF button to disconnect that output from the inputs Press the ALL button and then the OFF button to disconnect all the outputs
5	IN Buttons (1 to 16)		Select the input (including the two local built-in transmitters) to switch to the output
6	OUT Buttons (1 to 8, LOCAL)		Select the output to which the input is switched, including the local built-in receiver
7	STO Button		Pressing STO followed by an IN button (from 1 to 15) stores the current setting ² in the non-volatile memory
8	RCL Button		Pressing RCL followed by an IN button (from 1 to 15) recalls a setup from the non-volatile memory
9	FOLLOW Button		Pressing FOLLOW followed by the TAKE button enters the Follow mode in which the UXGA, audio and RS-232 signals switch simultaneously
10	BREAKAWAY	UXGA Button	When pressed twice ³ the button illuminates and the actions that follow will relate to UXGA
11		AUDIO+RS-232 (Tx) Button	When pressed twice ³ the button illuminates and the actions that follow will relate to audio/direct ⁴ RS-232
12		RS-232 (Rx) Button	When pressed twice ³ the button illuminates and the actions that follow will relate to RS-232 reply ⁴
13	MATRIX STATUS 40x4 LCD Display		Displays the selected INPUT (video, audio and RS-232) switched to the OUTPUT
14	TAKE Button		Pressing TAKE toggles the mode between the Confirm mode ⁵ and the At Once mode (user confirmation per action is unnecessary). When in Confirm mode, pressing the TAKE button will implement a pending configuration
15	LOCK Button		Toggles activation/inactivation of the front panel buttons. When the front panel is locked you can still control via the interfaces

1 For example, press ALL and then IN button # 3 to connect input # 3 to all the outputs

2 For example, press STO and then the IN button # 3 to store in Setup # 3

3 After pressing once, the button blinks

4 Direct RS-232 refers to the signal transmitted from the transmitter to the receiver; RS-232 reply refers to the signal returned from the receiver to the transmitter

5 When in the Confirm mode, the TAKE button illuminates

Your VS-169TP 16x9 CAT 5 Matrix Switcher

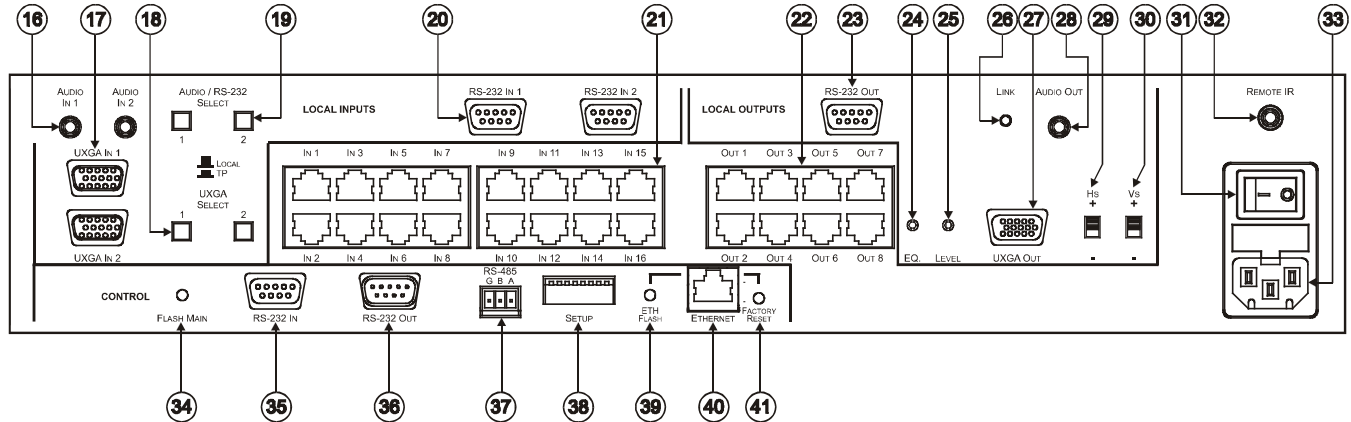


Figure 2: VS-169TP 16x9 CAT 5 Matrix Switcher Rear Panel

Table 2: VS-169TP 16x9 CAT 5 Matrix Switcher Rear Panel Functions

#	Feature	Function
16	AUDIO IN 3.5mm Mini Jack	Connect to the local audio source (for local inputs 1 and 2)
17	UXGA IN 15-pin Connector	Connect to the UXGA source (for local inputs 1 and 2)
18	UXGA SELECT Pushbuttons	Select the remote or LOCAL (built-in) receiver for input 1 and input 2 for UXGA
19	AUDIO/RS-232 SELECT Pushbuttons	Select the remote or LOCAL (built-in) receiver for input 1 and input 2 for AUDIO and RS-232
20	RS-232 IN 9-pin D-sub Connectors	Connect to the RS-232 source for local inputs 1 and 2
21	IN (1 to 16) RJ-45 Connectors	Connect to the LINE OUT RJ-45 connectors of the remote transmitters via CAT 5
22	OUT (1 to 8) RJ-45 Connectors	Connect to the LINE IN RJ-45 connector of the remote receivers via CAT 5
23	RS-232 OUT 9-pin D-sub Connectors	Connect to the RS-232 local acceptor
24	EQ. Trimmer	Adjusts the cable compensation equalization level for the local built-in receiver
25	LEVEL Trimmer	Adjusts the output signal level for the local built-in receiver
26	LINK LED	Illuminates when the local receiver receives the correct input signal
27	UXGA OUT 15-pin Connector	Connects to the UXGA local acceptor
28	AUDIO OUT 3.5mm Mini Jack	Connects to the analog audio local acceptor
29	HS Switch	Slide down ¹ to set the H SYNC to negative polarity (-); slide up to set the H SYNC to positive polarity (+)
30	VS Switch	Slide down ¹ to set the V SYNC to negative polarity (+); slide up to set the V SYNC to positive polarity (-)
31	POWER Switch	Switch for turning the unit ON and OFF
32	REMOTE IR 3.5mm Mini Jack ²	Connect to an external IR receiver unit for controlling the machine via an IR remote controller (instead of using the front panel IR receiver) ³
33	POWER IN with fuse	AC connector enabling power supply to the VS-169TP
34	FLASH MAIN	Push in ⁴ to upgrade the switcher microcontroller to the latest Kramer firmware (see Section 10.1), or release (the factory default) for normal operation
35	RS-232 IN 9-pin D-sub Port	Connect to the PC or the remote controller
36	RS-232 OUT 9-pin D-sub Port	Connects to the RS-232 IN 9-pin D-sub F port of the next unit in the daisy-chain connection
37	RS-485 Terminal Block Port	Pins B (-) and A (+) are for RS-485; connect pin G to the cable shield (if required)
38	SETUP DIP-switches	For setup of the unit (see Section 6.2)
39	ETH FLASH Pushbutton	Push in ⁴ to upgrade the ETH FLASH firmware version (see Section 10.2), or release (the factory default) for normal operation
40	ETHERNET Connector	Connects to the PC or other Serial Controller through computer networking LAN

1 By default, both switches are set down (for a negative V SYNC and H SYNC polarity)

2 Covered by a cap. The 3.5mm connector at the end of the internal IR connection cable fits through this opening

3 Optional. Can be used instead of the front panel (built-in) IR receiver to remotely control the VS-169TP (only if the internal IR connection cable has been installed)

4 Using a small screwdriver, if required

#	Feature	Function
41	FACTORY RESET Pushbutton	Press to reset to factory default definitions ¹ :
		IP Address: 192.168.1.39
		Mask: 255.255.255.0
		Gateway: 192.168.1.1

4.1 Using the IR Transmitter

You can use the **RC-IR2** IR transmitter to control the **VS-169TP** via the built-in IR receiver on the front panel or, instead, via an optional external IR receiver². The external IR receiver can be located 15 meters away from the machine. This distance can be extended to up to 60 meters when used with three extension cables³

Before using the external IR receiver, be sure to arrange for your Kramer dealer to insert the internal IR connection cable⁴ with the 3.5mm connector that fits into the REMOTE IR opening on the rear panel. Connect the external IR receiver to the REMOTE IR 3.5mm connector.

¹ Turn the machine OFF using the power switch and then turn it ON while pressing the ETH Factory Reset button. The unit will power up and load its memory with the factory default definitions

² Model: C-A35M/IRR-50

³ Model: C-A35M/A35F-50

⁴ P/N: 505-70434010-S

5 Installing the VS-169TP in a Rack

This section describes how to install the **VS-169TP** in a rack.

Before installing in a rack, be sure that the environment is within the recommended range:

OPERATING TEMPERATURE:	0° to +40°C (32° to 104°F)
STORAGE TEMPERATURE:	-40° to +70°C (-40° to 158°F)
HUMIDITY:	10% to 90%, RHL non-condensing




CAUTION!

When installing on a 19" rack, avoid hazards by taking care that:

1. It is located within the recommended environmental conditions, as the operating ambient temperature of a closed or multi unit rack assembly may exceed the room ambient temperature.
2. Once rack mounted, enough air will still flow around the machine.
3. The machine is placed straight in the correct horizontal position.
4. You do not overload the circuit(s). When connecting the machine to the supply circuit, overloading the circuits might have a detrimental effect on overcurrent protection and supply wiring. Refer to the appropriate nameplate ratings for information. For example, for fuse replacement, see the value printed on the product label.
5. The machine is earthed (grounded) in a reliable way and is connected only to an electricity socket with grounding. Pay particular attention to situations where electricity is supplied indirectly (when the power cord is not plugged directly into the socket in the wall), for example, when using an extension cable or a power strip, and that you use only the power cord that is supplied with the machine.

To rack-mount a machine:

1. Attach both ear brackets to the machine. To do so, remove the screws from each side of the machine (5 on each side), and replace those screws through the ear brackets.

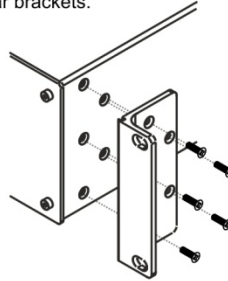

2. Place the ears of the machine against the rack rails, and insert the proper screws (not provided) through each of the four holes in the rack ears.

Note:

- In some models, the front panel may feature built-in rack ears
- Detachable rack ears can be removed for desktop use
- Always mount the machine in the rack before you attach any cables or connect the machine to the power
- If you are using a Kramer rack adapter kit (for a machine that is not 19"), see the Rack Adapters user manual for installation instructions available from our Web site


5.1 Wiring the CAT 5 LINE IN / LINE OUT RJ-45 Connectors

[Table 3](#) and [Figure 3](#) define the UTP/FTP¹ CAT 5 PINOUT, using a straight pin to pin cable with RJ-45 connectors:

Table 3: CAT 5 PINOUT

EIA /TIA 568A		EIA /TIA 568B	
PIN	Wire Color	PIN	Wire Color
1	Green / White	1	Orange / White
2	Green	2	Orange
3	Orange / White	3	Green / White
4	Blue	4	Blue
5	Blue / White	5	Blue / White
6	Orange	6	Green
7	Brown / White	7	Brown / White
8	Brown	8	Brown
Pair 1	4 and 5	Pair 1	4 and 5
Pair 2	3 and 6	Pair 2	1 and 2
Pair 3	1 and 2	Pair 3	3 and 6
Pair 4	7 and 8	Pair 4	7 and 8

Figure 3: CAT 5 PINOUT

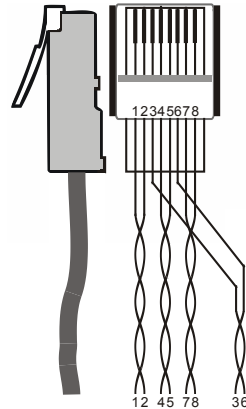

6 Connecting the VS-169TP 16x9 CAT 5 Matrix Switcher

To connect the **VS-169TP** as shown in the example in [Figure 4](#), do the following²:

- For signal sources that are located near the **VS-169TP** (the LOCAL INPUTS):
 - A UXGA source (for example, the graphics output on a laptop) to the UXGA IN 1 15-pin HD (F) connector³
 - An audio source to the AUDIO IN 1 3.5mm mini jack⁴, for example, using a Kramer C-GMA/GMA cable (VGA 15-pin HD (M) +Audio jack to VGA 15-pin HD (M) +Audio jack)⁵
 - An RS-232 cable with a 9-pin D-sub connector to the PC or controller at one end, and a 9-pin D-sub connector at the other end to the RS-232 IN 1 and/or the RS-232 IN 2.

¹ FTP means Foiled twisted pair

² Switch OFF the power on each device before connecting it to your VS-169TP. After connecting your VS-169TP, switch on its power and then switch on the power on each device

³ You can connect UXGA IN 1 and/or UXGA IN 2

⁴ You can connect AUDIO IN 1 and/or AUDIO IN 2

⁵ Not supplied. The full list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>. Alternatively, you can connect an UXGA source to the UXGA IN 15-pin HD (F) connector, and a separate audio source to the AUDIO IN 3.5mm mini jack

2. For signal destinations that are located near the **VS-169TP** (the LOCAL OUTPUT):
 - The UXGA OUT 15-pin HD (F) connector to the UXGA monitor
 - The AUDIO OUT 3.5mm mini jack to the self-powered speaker system
 - An RS-232 cable with a 9-pin D-sub connector to the RS-232 OUT at one end, and a 9-pin D-sub connector at the other end to the RS-232 IN of the controlled unit
 - If required, adjust the cable compensation equalization level and/or video output signal level with a screwdriver
 - If necessary, set the H SYNC and V SYNC switches¹
3. For signal sources that are located at a distance from the **VS-169TP**, connect the remote transmitters/receivers as follows:
 - Connect up to 16 transmitters² (for example, the Kramer **TP-125EDID XGA / Audio / Data Line Transmitter**³)
 - Connect up to eight receivers² (for example, the Kramer **TP-126 UXGA / Audio / Data Line Transmitter**³)
4. Connect the 12V DC power supply to the power socket and connect the adapter to the mains electricity on both the transmitters and the receivers.
5. If required, connect a PC or controller to the RS-232 ports (see [Section 7.1](#)) or the RS-485 port (see [Section 7.2](#)) or the ETHERNET port (see [Section 7.3](#)).
6. If required, set the DIP-switches (see [Section 6.2](#)).
7. Connect the power cord⁴.

¹ By default, both switches are set down (for negative V SYNC and H SYNC polarity)

² You do not have to connect all the inputs and outputs

³ Download up-to-date Kramer user manuals from our Web site at <http://www.kramerelectronics.com>

⁴ We recommend that you use only the power cord that is supplied with this machine

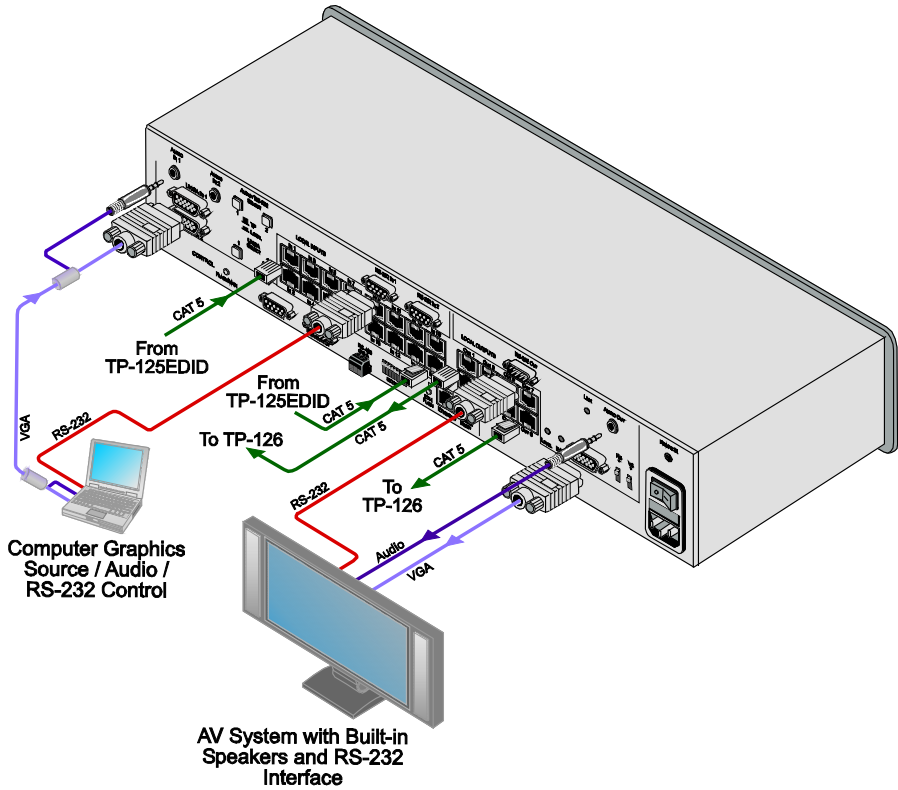


Figure 4: Connecting the VS-169TP 16x9 CAT 5 Matrix Switcher

6.1 Connecting the RS-232 Ports

The **VS-169TP** includes the following RS-232 ports:

- Two local RS-232 IN ports and one local RS-232 OUT port (see [Section 6.1.1](#)) to transmit RS-232 signals along with the video and audio signals from the source to the destination units
- RS-232 IN and RS-232 OUT control ports (see [Section 6.1.2](#)) to control the matrix itself (same functions as the RS-485 and IP interfaces)

6.1.1 Connect the Local RS-232 Ports

To connect a PC or controller to the local ports, connect the 9-pin D-sub ports of the PC or controller to the LOCAL IN RS-232 IN 1 and/or RS-232 IN 2 ports, and to the LOCAL RS-232 OUT port of the **VS-169TP** unit (via RS-232 cables), as required.

6.1.2 Connect the Control RS-232 Ports

To connect a PC to the **VS-169TP** unit:

1. Connect the RS-232 9-pin D-sub port on your PC to the CONTROL RS-232 IN 9-pin D-sub rear panel port of the **VS-169TP** with a 9-wire cable¹.
2. Make sure that DIP 7 is set to ON².

6.2 Setting the DIP-switches

[Figure 5](#) and [Table 4](#) define the **VS-169TP** DIP-switches. By default the **VS-169TP** (when used as a single unit) is set to Machine #1 (see [Table 5](#)). When connecting more than one **VS-169TP** unit, allocate a unique Machine # to the **VS-169TP**. The line termination DIP-switch is for use only with the RS-485 port.

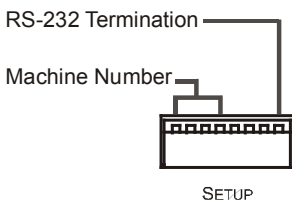


Figure 5: DIP-switch Settings

Table 4: DIP-switch Settings

DIPS	Description
1, 2, 3, 4	Set the MACHINE # (see Section 6.2.1)
5, 6	Not used
7	Set ON to avoid having to connect a null-modem adapter or using a null-modem connection
8	Set ON for RS-485 termination for the first and the last machine (RS-485 line terminates with 110Ω); for others set OFF (RS-485 line is open)

¹ The cable should consist of at least three straight-through wires: PINs 2, 3 and 5

² See [Section 6.2](#)

6.2.1 Setting the Machine

To control a unit remotely via RS-232, RS-485, IR or the Ethernet, each unit has to be identified via its unique Machine #. Set the Machine #¹ on a **VS-169TP** unit according to [Table 5](#).

Table 5: Machine # DIP-switch Settings

Mach. #	DIP 1	DIP 2	DIP 3	DIP 4
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON

Mach. #	DIP 1	DIP 2	DIP 3	DIP 4
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON

¹ When using a single unit, set the unit to MACHINE # 1

7 Control the VS-169TP 16x9 CAT 5 Matrix Switcher

You can use a PC to control the **VS-169TP** unit via:

- An RS-232 interface (see [Section 7.1](#))
- An RS-485 interface (see [Section 7.2](#))
- The Ethernet port (see [Section 7.3](#))

When connecting several units, always use only one type of interface, the RS-232 or the RS-485. Do not mix them

7.1 Controlling via the RS-232 Interface

To control the **VS-169TP** via the RS-232 interface:

1. Connect the RS-232 IN 9-pin D-sub port¹ of the **VS-169TP** unit to a PC (see [Section 6.1](#)).
2. Set the machine # to any number from 1 to 15 (see [Table 5](#)).

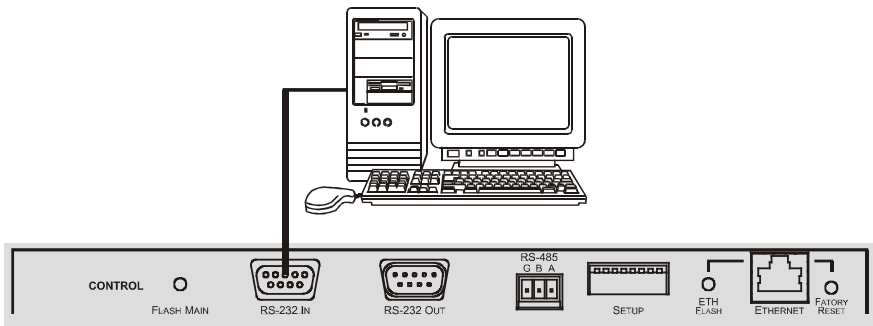


Figure 6: Controlling the VS-169TP via the RS-232 Interface

If several Kramer units are connected to one PC, use the daisy chain connection (PC to RS-232 IN, RS-232 OUT to RS-232 IN on the next machine, and so on).

¹ Alternatively, the ETHERNET port could be used for PC control (instead of RS-232)

7.2 Controlling via the RS-485 Interface

To control the **VS-169TP** unit via the RS-485 interface (see [Figure 7](#)):

1. Connect the 9-pin D-sub COM port of the PC to the RS-232 IN 9-pin D-sub F port on the **VP-43xl**.
2. Connect the RS-485 port on the **VP-43xl** to the RS-485 port on the **VS-169TP**.
3. Set the Machine # to any number from 1 to 15 (see [Table 5](#)).

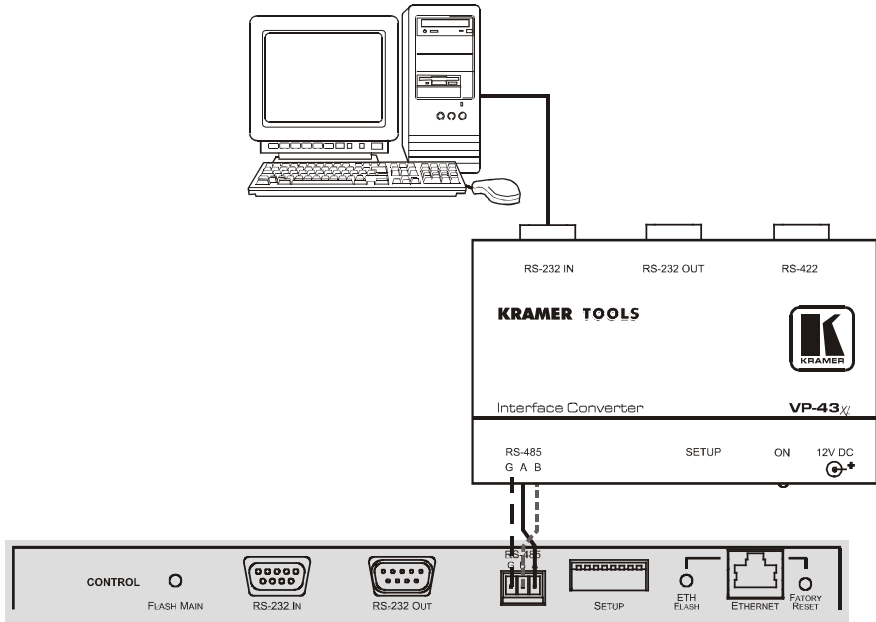


Figure 7: Controlling the VS-169TP via the RS-485 Interface

7.3 Controlling via the ETHERNET

You can connect the **VS-169TP** via the Ethernet, using a crossover cable (see [Section 7.3.1](#)) for direct connection to the PC or a straight through cable (see [Section 7.3.2](#)) for connection via a network hub or network router¹.

7.3.1 Connecting the ETHERNET Port directly to a PC (Crossover Cable)

You can connect the Ethernet port of the **VS-169TP** to the Ethernet port on your PC, via a crossover cable with RJ-45 connectors.

This type of connection is recommended for identification of the factory default IP Address of the **VS-169TP** during the initial configuration

After connecting the Ethernet port, configure your PC as follows:

1. Right-click the My Network Places icon on your desktop.
2. Select **Properties**.
3. Right-click Local Area Connection Properties.
4. Select **Properties**.
The Local Area Connection Properties window appears.
5. Select the Internet Protocol (TCP/IP) and click the **Properties** Button (see [Figure 8](#)).

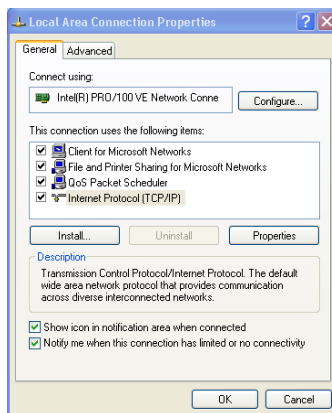


Figure 8: Local Area Connection Properties Window

¹ After connecting the Ethernet port, you have to install and configure your Ethernet Port. For detailed instructions, see the “Ethernet Configuration (FC-11) guide.pdf” file in the technical support section on our Web site:

6. Select Use the following IP Address, and fill in the details as shown in Figure 9.
7. Click **OK**.

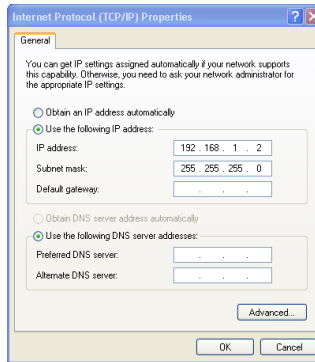


Figure 9: Internet Protocol (TCP/IP) Properties Window

7.3.2 Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)

You can connect the Ethernet port of the **VS-169TP** to the Ethernet port on a network hub or network router, via a straight-through cable with RJ-45 connectors.

7.3.3 Control Configuration via the Ethernet Port

To control several units via the Ethernet, connect the unit (Machine # 1) via the Ethernet port to the LAN port of your PC. Use your PC initially to configure the settings.

8 Understanding the VS-169TP 16x9 CAT 5 Matrix Switcher

The **VS-169TP** is a 16x9 matrix switcher for CAT 5/6 twisted pair transmitters and receivers, capable of sending (over UTP/FTP twisted-pair cables) UXGA, analog stereo/ S/PDIF audio, and bidirectional RS-232 command/reply signals.

Depending on the transmitter and receiver models connected to the **VS-169TP**¹, it is possible to send the following signals:

- UXGA
- UXGA with analog stereo/ S/PDIF audio, or
- UXGA with analog stereo and bidirectional RS-232 commands at the same time

Any of the inputs can be switched to any or all outputs.

IN 1 and IN 2 can be used for accepting signals either from the local (built-in) or remote transmitters (see [Section 9.1](#)). Inputs 3 to 16 accept only signals from the connected remote transmitters. Outputs 1 to 8 transmit the incoming signal to the remote receivers, and output 9 locally decodes all the signals and outputs these as regular UXGA, analog audio and RS-232 signals.

8.1 Transmitting the RS-232 Signal

The video and audio signals are always transmitted in one direction, when using the **VS-169TP**, from the source (via the input) to the acceptor (via the output). However, the RS-232 signal behaves entirely differently:

- It is not a continuous signal, but consists of one or a series of short messages (commands), which pass the matrix from the input to the output
- The destination unit sends a reply for each command that is received, consisting of other short messages (replies), which pass the **VS-169TP** from the output to the input, back to the source of the command

Consequently, the **VS-169TP** needs bidirectional RS-232 signals.

Kramer twisted pair technology embeds the RS-232 command in the audio stream so that it is transmitted on the same pair as the audio signal. In this way the audio signal and the RS-232 command always pass the switcher together even in the breakaway mode. The RS-232 reply can be switched separately (see [Section 9.7.2](#)).

¹ For example, TP-125EDID and TP-126, or TP-121 and TP-122

In the example illustrated in [Figure 10](#), when the transmitter (video, audio and RS-232 signals) connected to IN 10 is switched to OUT 5, all three signals are passed to the receiver connected to OUT 5, and the RS-232 reply command returns from the receiver (OUT 5) back to the transmitter (IN 10).

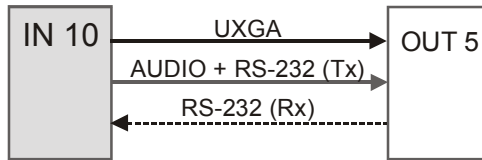


Figure 10: Switching an Input to an Output

In the example illustrated in [Figure 11](#), the transmitter (video, audio and RS-232 signals) connected to IN 10 is switched to OUT 3, OUT 5 and OUT 8 – each of which is connected to a receiver. The signals are passed to all the outputs and the RS-232 signal generates a reply command on each receiver. The reply signal on each receiver contains not only different information, but can be sent at different times and in different formats. When this information is passed back to IN 10, it might be rejected by the control unit since it includes a mix of reply signals, and control of the destination units becomes impossible.

To avoid a mixed RS-232 reply command, the **VS-169TP** passes only one reply from the output back to the input. In the FOLLOW mode, the **VS-169TP** passes the RS-232 reply from the output which has the lowest numerical value (in this example, OUT 3). Other RS-232 replies are blocked.

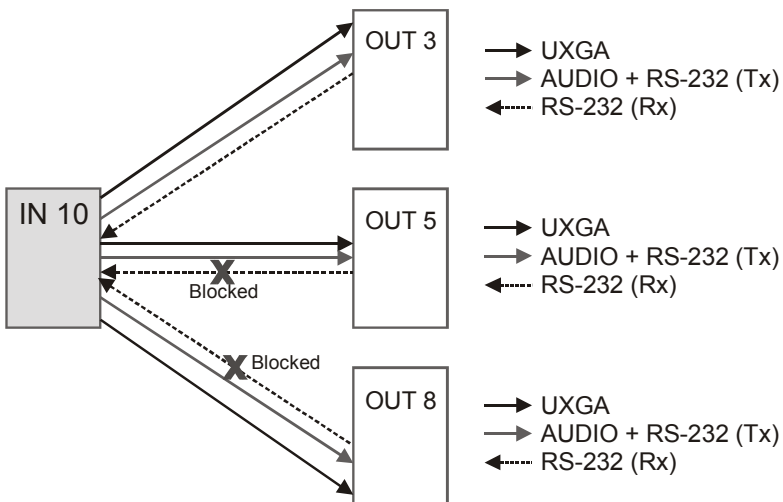


Figure 11: Switching an Input to Several Outputs

[Figure 12](#) shows the MATRIX STATUS display in the Follow Mode:

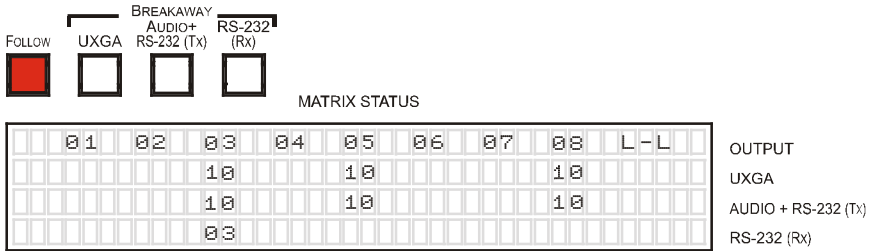


Figure 12: MATRIX STATUS Display in the Follow Mode

In the breakaway mode, you can select the output port from which the reply will be returned, by pressing the RS-232 (Rx) front panel button in the BREAKAWAY area, and then selecting the desired output (see [Section 9.7](#)).

9 Operating the VS-169TP 16x9 CAT 5 Matrix Switcher

This section describes how to:

- Toggle inputs #1 and #2 between local and remote inputs (see [Section 9.1](#))
- Read the 7-segment displays (see [Section 9.3.1](#))
- Use the IN and OUT buttons (see [Section 9.3](#))
- Confirm settings (see [Section 9.4](#))
- Store and recall input/output configurations (see [Section 9.5](#))
- Lock the front panel (see [Section 9.6](#))
- Choose the audio-follow-video or the breakaway feature (see [Section 9.7](#))

9.1 Switching Inputs #1 and #2 between local and remote

You can select the function of the IN 1 and IN2 front panel buttons to be either local or remote (TP), via the four rear panel SELECT pushbuttons (items 18 and 19 in [Figure 2](#)).

The UXGA SELECT buttons define the VIDEO signal and the AUDIO/RS-232 SELECT buttons define the AUDIO and RS-232 signals. All four buttons switch independently.

This setting can only be changed via these rear panel buttons and cannot be changed from the front panel or any other interface command.

9.2 The STATUS 7-Segment Display

During normal operation, the STATUS display shows which inputs (UXGA, AUDIO and/or RS-232) are switched to which outputs, as illustrated in [Figure 13](#):

MATRIX STATUS											
	01	02	03	04	05	06	07	08	L-L		OUTPUT
	01	01	16	08	08	08	13	05	08		UXGA
	01	01	16	08	08	08	13	05	08		AUDIO + RS-232 (Tx)
	01		03	04			07	08			RS-232 (Rx)

Figure 13: 7-segment Display During Normal Operation

[Figure 14](#) shows an example of the display immediately after switching on the power:

MATRIX STATUS											
				KRAMER	ELECTRONICS						OUTPUT
											UXGA
											AUDIO + RS-232 (Tx)
											RS-232 (Rx)

Figure 14: 7-segment Display Following Power ON

9.3 Switching an Input to an Output

To switch an input to an output:

1. Press the required OUT button from 1 to 8 or the L-L (local, on the display).
The input under the selected output on the IN 7-segment display blinks.
2. Press an IN button to select the input to switch to the output.
The selected input number appears on the 7-segment display.

Incomplete operations on the **VS-169TP** timeout after 25 seconds

9.3.1 Switching one Input to all Outputs

To switch one input to all the outputs (in the AT ONCE mode):

1. Press the ALL button.
The MATRIX STATUS display shows the three sets of digits¹ in the follow mode blinking simultaneously. In the breakaway mode, only the

¹ Each representing the present input number for that respective output

line of the selected signal blinks.

2. Press the appropriate IN button.
This input switches to all the outputs, and the MATRIX STATUS display shows the selected input number.

To switch one input to all the outputs in the CONFIRM mode (the TAKE button illuminates), do the following:

1. Press the ALL button.
The MATRIX STATUS display shows the three sets of blinking digits (each representing the present input number for that respective output) blinking simultaneously.
2. Press the appropriate IN button.
The current input settings blink alternately with the selected input number digits, and the TAKE button blinks.
3. Press the TAKE button to confirm the action.
The selected input switches to all the outputs and the TAKE button illuminates. The MATRIX STATUS display shows the identical digits (representing the selected input number) for all outputs.

9.3.2 Clearing an Output

To clear an output (in the AT ONCE mode):

1. Press the appropriate OUT button.
The MATRIX STATUS display shows the two blinking digits, representing the present input number for that specific output.
2. Press the OFF button.
The input is cleared and the MATRIX STATUS display does not show any input number in its place.

9.3.3 Clearing all the Outputs

To clear all outputs (in the AT ONCE mode):

1. Press the ALL button.
The MATRIX STATUS display shows the three sets of digits¹ blinking simultaneously. In the breakaway mode, only the line of the selected signal blinks
2. Press the OFF button.
The MATRIX STATUS display shows: RESET ALL OUTPUTS?
CONFIRM
and the TAKE button blinks.

¹ Each representing the present input number for that respective output

3. Press the TAKE button to confirm the action.
All the outputs are cleared.

9.4 Confirming Settings

You can choose to work in the At Once or the Confirm mode.

In the At Once mode (TAKE button does not illuminate):

- Pressing an OUT-IN combination implements the switch immediately
- You save time as execution is immediate and actions require no user confirmation
- No protection is offered to allow the correction of an erroneous action before it is implemented

In the Confirm mode (TAKE button illuminates):

- You can key-in and then confirm it by pressing the TAKE button, to simultaneously activate the multiple switches
- Every action requires user confirmation, protecting against erroneous switching
- Execution is delayed¹ until the user confirms the action

9.4.1 Toggling between the At Once and Confirm Modes

To toggle between the At Once and Confirm modes, do the following:

1. Press the TAKE button to toggle from the At Once mode (in which the TAKE button does not illuminate) to the Confirm mode (in which the TAKE button illuminates).
Actions now require user confirmation and the TAKE button illuminates.
2. Press the illuminated TAKE button to toggle from the Confirm mode back to the At Once mode.
Actions no longer require user confirmation and the TAKE button no longer illuminates.

These actions cannot take place when the TAKE button blinks

9.4.2 Confirming a Switching Action

To confirm a switching action (in the Confirm mode), do the following:

1. Press an OUT-IN combination.
The corresponding 7-segment display blinks and the MATRIX SELECTOR display alternates between “CURRENT” and “UPDATED”.
The TAKE button also blinks.

¹ Failure to press the TAKE button within one minute (the Timeout) will abort the action

2. Press the blinking TAKE button to confirm the action.
The corresponding 7-segment display no longer blinks. The TAKE button illuminates.

9.5 Storing/Recalling Input/Output Configurations

You can store and recall up to 15 input configurations¹ using the 16 IN buttons.

9.5.1 Storing an Input/Output Configuration

To store the current status in memory, do the following:

1. Press the STO button.
The STO button blinks and the MATRIX SELECTOR displays:

Store setup #_

2. Press one of the 16 IN front panel buttons (this will be the setup # in which the current status is stored).
If the input already has a stored setting, the MATRIX SELECTOR displays: **#15=>NOT EMPTY. OVERWRITE?** (for example, for storing a setting in IN 15).
If there is no setting stored in the selected input, the MATRIX SELECTOR displays: **STORED!** The memory stores the data at that reference.

In the Confirm mode, press the blinking TAKE button to confirm the action.

9.5.2 Recalling an Input/Output Configuration

To recall an input/output configuration, do the following:

1. Press the RCL button.
The RCL button blinks.
Recall setup #_
2. Press the appropriate IN button (the button # corresponding to the setup #).
The current and new setting inputs blink alternately.
If in the Confirm mode, MATRIX SELECTOR display shows: “Current” and “Updated” blinking alternately, together with the RCL button and the TAKE button, and will only be implemented after pressing the TAKE button.
The memory recalls the stored data from that reference.

Tip: If you cannot remember which of the 15 input configurations is the one that you want, set the **VS-169TP** to the Confirm mode and manually scan² all the input/output configurations until you locate it.

¹ You can store and recall audio and video configurations and audio gain data

² By pressing the RCL button followed by the INPUT/OUTPUT buttons

9.6 Locking the Front Panel

To prevent changing the settings accidentally or tampering with the unit via the front panel buttons, lock¹ your **VS-169TP**. Unlocking releases the protection mechanism.

To lock the **VS-169TP**:

- Press the LOCK button until the LOCK button is illuminated.
The front panel is locked. Pressing a button will have no effect other than causing the LOCK button to blink²

To unlock the **VS-169TP**:

- Press the illuminated LOCK button until the LOCK button is no longer illuminated and the front panel unlocks

9.7 Choosing the Follow or Breakaway Operation Mode

The **VS-169TP** can operate either in the Follow mode or the Breakaway mode:

- Press the FOLLOW front panel button to set the **VS-169TP** to the FOLLOW mode, where all operations relate to the UXGA, AUDIO and RS-232 channels (the FOLLOW and TAKE buttons blink).
- Press one of the BREAKAWAY buttons (UXGA, AUDIO + RS-232 (Tx) or RS-232 (Rx)). The selected button blinks
Press it a second time to operate in the breakaway mode

9.7.1 Follow Mode Operation

In the FOLLOW operation mode all the operations relate to the video, audio and RS-232 signals. The matrix automatically selects the RS-232 reply sent by the lowest number output.

By default, the **VS-169TP** is set to the FOLLOW mode.

To return to the **VS-169TP** to the Follow operation mode³:

1. Press the FOLLOW front panel button.
The FOLLOW button and the TAKE button blink⁴.
2. Press the TAKE button.

1 Even when the front panel is locked you can still operate via RS-232 or RS-485, as well as via the Kramer RC-IR2 infrared Remote Control Transmitter

2 Warning that you need to unlock to regain control via the front panel

3 After operating in the Breakaway mode

4 Since the audio and video signals may be set differently

9.7.2 Breakaway Mode Operation

To set the **VS-169TP** to the Breakaway mode:

1. Press one of the BREAKAWAY buttons (UXGA, AUDIO + RS-232 (Tx) or RS-232 (Rx)).
The selected button blinks.
2. Press the desired channel a second time.

In the Breakaway operation mode you can switch the different channels independently. For example, when selecting UXGA in the breakaway mode, you can switch the video inputs independently from the audio and RS-232 channels.

The same applies when selecting AUDIO + RS-232 (Tx), letting you switch them without switching the UXGA signal.

When pressing the RS-232 (Rx) button, you can manually select the output from which the RS-232 reply is sent back to the input.

In the example illustrated in [Figure 11](#) on page [22](#), the RS-232 is selected automatically. Selecting the RS-232 (Rx) in the Breakaway mode, lets you select output 5 (instead of output 3) to reply to the command transmitted from input 10, as illustrated in [Figure 15](#).

The reply command from any output can be sent back only to the input which transmitted the command. If there are several outputs, the breakaway option lets you select the reply from a certain output, as illustrated in [Figure 15](#).

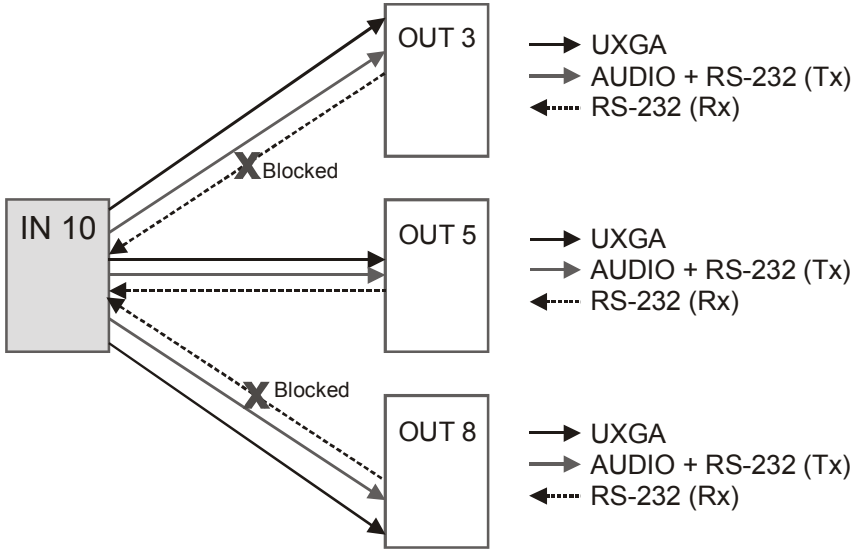


Figure 15: Operating in the RS-232 (Rx) Breakaway Mode

Figure 16 shows the MATRIX STATUS display in the RS-232 (Rx) Breakaway Mode:

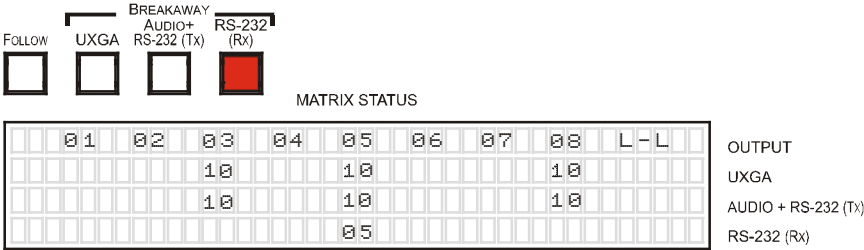


Figure 16: MATRIX STATUS Display in the RS-232 (Rx) Breakaway Mode

10 Flash Memory Upgrade

You upgrade both the **VS-169TP**:

- Switcher Firmware (see [Section 10.1](#))
- Ethernet Firmware (see [Section 10.2](#))

10.1 Switcher Firmware Upgrade

The **VS-169TP** uses a microcontroller that runs firmware located in FLASH memory.

The latest version of firmware and installation instructions can be downloaded from the Kramer Web site at www.kramerelectronics.com.

10.2 Ethernet Firmware Upgrade

The **VS-169TP** firmware is located in FLASH memory, which lets you upgrade to the latest Kramer firmware version in minutes!

The process involves:

- Downloading the upgrade package from the Internet
- Connecting the PC to the RS-232 port
- Upgrading the firmware

10.2.1 Downloading from the Internet

You can download the up-to-date file¹ from the Internet. To do so:

1. Go to our Web site at <http://www.Kramerelectronics.com> and download the file: “*SetKFRETH11-xx.zip*” from the technical support section.
2. Extract the file “*SetKFRETH11-xx.zip*” package, which includes the KFR-Programmer application setup and the .s19 firmware file, to a folder (for example, C:\Program Files\KFR Upgrade).
3. Install the KFR-Programmer Application.

10.2.2 Connecting the PC to the RS-232 Port

Before installing the latest Kramer Ethernet firmware version on the **VS-169TP**, do the following:

1. Connect the RS-232 9-pin D-sub rear panel port according to [Section 6.1](#).
2. Push the rear panel ETHERNET FLASH button to **Program** using a small screwdriver.
3. Connect the power on your machine.

¹ File names are liable to change from time to time

10.2.3 Upgrading Firmware

Follow these steps to upgrade the firmware:

1. Double click the KFR-Programmer desktop icon.
The KFR-Programmer window appears (see [Figure 17](#)).

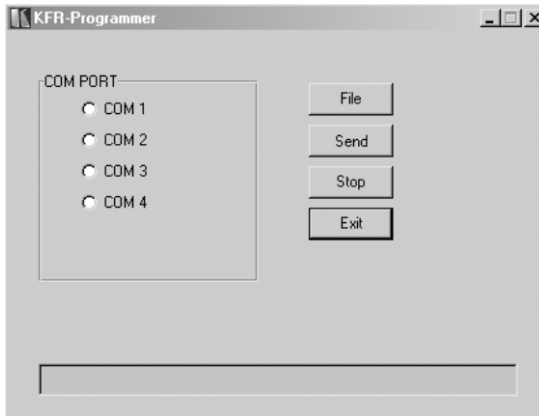


Figure 17: The KFR-Programmer Window

2. Select the required COM Port¹.
3. Press the File button to select the .s19 firmware file included in the package.
4. Press the Send button to download the file. The Send button lights red.
5. Wait until downloading is completed and the red Send button turns off.
6. Disconnect the power on the **VS-169TP**.
7. Release the ETHERNET FLASH button on the rear panel.
8. Connect the power on your machine.

¹ To which the VS-169TP is connected on your PC

11 Technical Specifications

The **VS-169TP** technical specifications are shown in Table 6:

Table 6: VS-169TP Technical Specifications¹

SIGNAL INPUTS:	16 CAT 5 remote transmitters on RJ-45 connectors 2 local RGBHV UXGA on 15-pin HD connectors 2 local stereo analog audio on 3.5mm mini connectors 2 local RS-232 controllers on 9-pin D-sub connectors
SIGNAL OUTPUTS:	8 CAT 5 remote receivers on RJ-45 connectors 1 local RGBHV UXGA on a 15-pin HD connector 1 local stereo analog audio on a 3.5mm mini connector 1 local RS-232 controllers on a 9-pin D-sub connector
CONTROL INPUTS/OUTPUTS:	1 RS-232 Input on a 9-pin D-sub connector 1 RS-232 Output on a 9-pin D-sub connector 1 RS-485 Input/Output on a 3-pin detachable terminal block 1 Ethernet Input/Output on an RJ-45 connector
RESOLUTION (VIDEO):	Up to WUXGA; HD compatible
SAMPLE RATE (AUDIO):	24bit, 48kHz
BAUD RATE (RS-232):	Up to 19200
CONTROL (LOCAL VIDEO OUT):	EQ: 0 to +33dB @50MHz; Level: -7.5dB to +4.4dB; H & V polarity
S/N RATIO (AUDIO):	>80dB
THD+N (AUDIO):	< 0.03%
OPERATING TEMPERATURE:	0° to +40°C (32° to 104°F)
STORAGE TEMPERATURE:	-40° to +70°C (-40° to 158°F)
HUMIDITY:	10% to 90%, RHL non-condensing
POWER SOURCE:	100-240VAC, 50-60Hz; 36VA (500mA maximum)
DIMENSIONS:	19" x 7" x 2U W, D, H
WEIGHT:	3.8kg (8.4lbs) approx
ACCESSORIES:	Power cord, rack "ears", Windows®-based control software, remote control transmitter
OPTIONS:	External remote IR receiver cable

12 Hex Table

[Table 7](#) lists the Hex values (which the protocol in [Section 13](#) describes in more detail) for the **VS-169TP**:

¹ Specifications are subject to change without notice

Hex Table

Table 7: VS-I69TP Hex Table

	OUT1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8	LOCAL
IN 1	01	01	01	01	01	01	01	01	01
	81	81	81	81	81	81	81	81	81
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 2	01	01	01	01	01	01	01	01	01
	82	82	82	82	82	82	82	82	82
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 3	01	01	01	01	01	01	01	01	01
	83	83	83	83	83	83	83	83	83
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 4	01	01	01	01	01	01	01	01	01
	84	84	84	84	84	84	84	84	84
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 5	01	01	01	01	01	01	01	01	01
	85	85	85	85	85	85	85	85	85
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 6	01	01	01	01	01	01	01	01	01
	86	86	86	86	86	86	86	86	86
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 7	01	01	01	01	01	01	01	01	01
	87	87	87	87	87	87	87	87	87
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 8	01	01	01	01	01	01	01	01	01
	88	88	88	88	88	88	88	88	88
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 9	01	01	01	01	01	01	01	01	01
	89	89	89	89	89	89	89	89	89
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 10	01	01	01	01	01	01	01	01	01
	8A	8A	8A	8A	8A	8A	8A	8A	8A
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 11	01	01	01	01	01	01	01	01	01
	8B	8B	8B	8B	8B	8B	8B	8B	8B
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 12	01	01	01	01	01	01	01	01	01
	8C	8C	8C	8C	8C	8C	8C	8C	8C
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 13	01	01	01	01	01	01	01	01	01
	8D	8D	8D	8D	8D	8D	8D	8D	8D
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 14	01	01	01	01	01	01	01	01	01
	8E	8E	8E	8E	8E	8E	8E	8E	8E
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 15	01	01	01	01	01	01	01	01	01
	8F	8F	8F	8F	8F	8F	8F	8F	8F
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81
IN 16	01	01	01	01	01	01	01	01	01
	90	90	90	90	90	90	90	90	90
	81	82	83	84	85	86	87	88	89
	81	81	81	81	81	81	81	81	81

13 Kramer Protocol 2000

The **VS-169TP** is compatible with Kramer's Protocol 2000, version 0.51. This RS-232/RS-485 communication protocol uses four bytes of information as defined below. The default data rate is 9600 baud, with no parity, 8 data bits, and 1 stop bit.

Note: Compatibility with Kramer's Protocol 2000 does not mean that a machine uses all of the commands below. Each machine uses a sub-set of Protocol 2000, according to its needs.

Table 8: Protocol Definitions

MSB		INSTRUCTION						LSB
	DESTINATION	N5	N4	N3	N2	N1	N0	
0	D							
7	6	5	4	3	2	1	0	
1st byte								
		INPUT						
		I6	I5	I4	I3	I2	I1	I0
1								
7	6	5	4	3	2	1	0	
2nd byte								
		OUTPUT						
		O6	O5	O4	O3	O2	O1	O0
1								
7	6	5	4	3	2	1	0	
3rd byte								
		MACHINE NUMBER						
		OV	X	M4	M3	M2	M1	M0
1								
7	6	5	4	3	2	1	0	
4th byte								

1st BYTE: Bit 7 – Defined as 0.
 D – “DESTINATION”: 0 - for sending information to the switchers (from the PC);
 1 - for sending to the PC (from the switcher).

N5...N0 – “INSTRUCTION”

The function to be performed by the switcher(s) is defined by the INSTRUCTION (6 bits). Also, if a function is performed via the machine's keyboard, then these bits are set with the INSTRUCTION NO. that was performed. The instruction codes are defined according to the table below (INSTRUCTION NO. is the value to be set for N5...N0).

2nd BYTE: Bit 7 – Defined as 1.
 I6...I0 – “INPUT”.

When switching (i.e. instruction codes 1 and 2), the INPUT (7 bits) is set as the input number which is to be switched. Similarly, if switching is done via the machine's front-panel, then these bits are set with the INPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

3rd BYTE: Bit 7 – Defined as 1.
 O6...O0 – “OUTPUT”.

When switching (i.e. instruction codes 1 and 2), the OUTPUT (7 bits) is set as the output number which is to be switched. Similarly, if switching is done via the machine's front-panel, then these bits are set with the OUTPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

4th BYTE: Bit 7 – Defined as 1.
 Bit 5 – Don't care.
 OVR – Machine number override.
 M4...M0 – MACHINE NUMBER.

Used to address machines in a system via their machine numbers. When several machines are controlled from a single serial port, they are usually configured together with each machine having an individual machine number. If the OVR bit is set, then all machine numbers will accept (implement) the command, and the addressed machine will reply.

For a single machine controlled via the serial port, always set M4...M0 = 1, and make sure that the machine itself is configured as MACHINE NUMBER = 1.

Table 9: Instruction Codes for Protocol 2000

Note: All values in the table are decimal, unless otherwise stated.

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
0	RESET VIDEO	0	0	1
1	SWITCH VIDEO	Set equal to video input which is to be switched (0 = disconnect)	Set equal to video output which is to be switched (0 = to all the outputs)	2, 15
2	SWITCH AUDIO	Set equal to audio input which is to be switched (0 = disconnect)	Set equal to audio output which is to be switched (0 = to all the outputs)	2
3	STORE VIDEO STATUS	Set as SETUP #	0 - to store 1 - to delete	2, 3, 15
4	RECALL VIDEO STATUS	Set as SETUP #	0	2, 3, 15
5	REQUEST STATUS OF A VIDEO OUTPUT	Set as SETUP #	Equal to output number whose status is reqd	4, 3
6	REQUEST STATUS OF AN AUDIO OUTPUT	Set as SETUP #	Equal to output number whose status is reqd	4, 3
8	BREAKAWAY SETTING	0	0 - audio-follow-video 1 - audio breakaway	2
		1	0 - FOLLOW mode 1 - Normal mode	15
11	REQUEST BREAKAWAY SETTING	Set as SETUP #, or set to 126 or 127 to request if machine has this function	0 - Request audio breakaway setting 1 - Request "FOLLOW" setting	3, 4, 6, 15
15	REQUEST WHETHER SETUP IS DEFINED / VALID INPUT IS DETECTED	SETUP # or Input #	0 - for checking if setup is defined 1 - for checking if input is valid	8
16	ERROR / BUSY	For invalid / valid input (i.e. OUTPUT byte = 4 or OUTPUT byte = 5), this byte is set as the input #	0 - error 1 - invalid instruction 2 - out of range 3 - machine busy 4 - invalid input 5 - valid input 6 - RX buffer overflow	9, 25
18	RESET AUDIO	0	0	1
19	STORE AUDIO STATUS	Set as SETUP #	0 - to store 1 - to delete	2, 3
20	RECALL AUDIO STATUS	Set as SETUP #	0	2, 3
30	LOCK FRONT PANEL	0 - Panel unlocked 1 - Panel locked	0	2
31	REQUEST WHETHER PANEL IS LOCKED	0	0	16
44	SWITCH CONTROL DATA	Set equal to control data input which is to be switched (0 = disconnect)	Set equal to control data output which is to be switched (0 = to all the outputs)	2,27
45	REQUEST STATUS OF CONTROL DATA OUTPUT	Set as SETUP #	Equal to output number whose status is reqd	3,4,27
58	EXECUTE LOADED DATA	Set as 0, or as SETUP #.	1-Take 2-Cancel	22, 3
59	LOAD VIDEO DATA	Set equal to video input (0 = disconnect) (127 = load SETUP #)	Set equal to video output (0 = to all the outputs) or SETUP #	22, 23
60	LOAD AUDIO DATA	Set equal to audio input (0 = disconnect) (127 = load SETUP #)	Set equal to audio output (0 = to all the outputs) or SETUP #	22, 23

Kramer Protocol 2000

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
61	IDENTIFY MACHINE	1 - video machine name 2 - audio machine name 3 - video software version 4 - audio software version 5 - RS422 controller name 6 - RS422 controller version 7 - remote control name 8 - remote software version 9 - Protocol 2000 revision	0 - Request first 4 digits 1 - Request first suffix 2 - Request second suffix 3 - Request third suffix 10 - Request first prefix 11 - Request second prefix 12 - Request third prefix	13
62	DEFINE MACHINE	1 - number of inputs 2 - number of outputs 3 - number of setups	1 - for video 2 - for audio 3 - for SDI 4 - for remote panel 5 - for RS-422 controller	14

NOTES on the above table:

NOTE 1 – When the master switcher is reset, (e.g. when it is turned on), the reset code is sent to the PC. If this code is sent to the switchers, it will reset according to the present power-down settings.

NOTE 2 – These are bi-directional definitions. That is, if the switcher receives the code, it will perform the instruction; and if the instruction is performed (due to a keystroke operation on the front panel), then these codes are sent. For example, if the HEX code

01 85 88 83

was sent from the PC, then the switcher (machine 3) will switch input 5 to output 8. If the user switched input 1 to output 7 via the front panel keypad, then the switcher will send HEX codes:

41 81 87 83

to the PC.

When the PC sends one of the commands in this group to the switcher, then, if the instruction is valid, the switcher replies by sending to the PC the same four bytes that it was sent (except for the first byte, where the DESTINATION bit is set high).

NOTE 3 – SETUP # 0 is the present setting. SETUP # 1 and higher are the settings saved in the switcher's memory, (i.e. those used for Store and Recall).

NOTE 4 – The reply to a "REQUEST" instruction is as follows: the same instruction and INPUT codes as were sent are returned, and the OUTPUT is assigned the value of the requested parameter. The replies to instructions 10 and 11 are as per the definitions in instructions 7 and 8 respectively. For example, if the present status of machine number 5 is breakaway setting, then the reply to the HEX code

0B 80 80 85

would be HEX codes

4B 80 81 85

NOTE 5 – For the OUTPUT byte set as 6, the VIS source is the input selected using the OUTPUT byte. Similarly, for the OUTPUT byte set as 7, the VIS source is the output selected using the OUTPUT byte. Note also, that on some machines the sync source is not software selectable, but is selected using switches, jumpers, etc!

NOTE 6 – If INPUT is set to 127 for these instructions, then, if the function is defined on this machine, it replies with OUTPUT=1. If the function is not defined, then the machine replies with OUTPUT=0, or with an error (invalid instruction code).

If the INPUT is set to 126 for these instructions, then, if possible, the machine will return the current setting of this function, even for the case that the function is not defined. For example, for a video switcher which always switches during the VIS of input #1, (and its VIS setting cannot be programmed otherwise), the reply to the HEX code

0A FE 80 81 (i.e. request VIS setting, with INPUT set as 126dec)

would be HEX codes

4A FE 81 81 (i.e. VIS setting = 1, which is defined as VIS from input #1).

NOTE 7 – Setting OUTPUT to 0 will return the VIS source setting as defined in instruction #7. Setting to 1 will return the input # or output # of the sync source (for the case where the VIS source is set as 6 or as 7 in instruction #7). Setting to 2 returns the vertical sync frequency (0 for no input sync, 50 for PAL, 60 for NTSC, 127 for error).

NOTE 8 – The reply is as in TYPE 3 above, except that here the OUTPUT is assigned with the value 0 if the setup is not defined / no valid input is detected; or 1 if it is defined / valid input is detected.

NOTE 9 – An error code is returned to the PC if an invalid instruction code was sent to the switcher, or if a parameter associated with the instruction is out of range (e.g. trying to save to a setup greater than the highest one, or trying to switch an input or output greater than the highest one defined). This code is also returned to the PC if an RS-232 instruction is sent while the machine is being programmed via the front panel. Reception of this code by the switcher is not valid.

NOTE 10 – This code is reserved for internal use.

NOTE 11 – For machines where the video and / or audio parameter is programmable.

NOTE 12 – Under normal conditions, the machine's present status is saved each time a change is made. The "power-down" save (auto-save) may be disabled using this code. Note that whenever the machine is turned on, the auto-save function is set.

NOTE 13 – This is a request to identify the switcher/s in the system. If the OUTPUT is set as 0, and the INPUT is set as 1, 2, 5 or 7, the machine will send its name. The reply is the decimal value of the INPUT and OUTPUT. For example, for a 2216, the reply to the request to send the audio machine name would be (HEX codes):

7D 96 90 81 (i.e. 128dec+ 22dec for 2nd byte, and 128dec+ 16dec for 3rd byte).

If the request for identification is sent with the INPUT set as 3 or 4, the appropriate machine will send its software version number. Again, the reply would be the decimal value of the INPUT and OUTPUT - the INPUT representing the number in front of the decimal point, and the OUTPUT representing the number after it. For example, for version 3.5, the reply to the request to send the version number would be (HEX codes):

7D 83 85 81 (i.e. 128dec+ 3dec for 2nd byte, 128dec+ 5dec for 3rd byte).

If the OUTPUT is set as 1, then the ASCII coding of the lettering following the machine's name is sent. For example, for the VS-7588YC, the reply to the request to send the first suffix would be (HEX codes):

7D D9 C3 81 (i.e. 128dec+ ASCII for "Y"; 128dec+ ASCII for "C").

NOTE 14 – The number of inputs and outputs refers to the specific machine which is being addressed, not to the system. For example, if six 16X16 matrices are configured to make a 48X32 system (48 inputs, 32 outputs), the reply to the HEX code

3E 82 81 82 (i.e. request the number of outputs)

would be HEX codes

7E 82 90 82 i.e. 16 outputs

NOTE 15 – When the OVR bit (4th byte) is set, then the "video" commands have universal meaning. For example, instruction 1 (SWITCH VIDEO) will cause all units (including audio, data, etc.) to switch. Similarly, if a machine is in "FOLLOW" mode, it will perform any "video" instruction.

NOTE 16 – The reply to the "REQUEST WHETHER PANEL IS LOCKED" is as in NOTE 4 above, except that here the OUTPUT is assigned with the value 0 if the panel is unlocked, or 1 if it is locked.

NOTE 17 – For clean switching of RGBHV video, the "seamless switching" option may be used. The blanking period for the transition of the RGB sources may be set in this case, in steps of 25 milliseconds. For example, to set for 350ms blanking time (14 steps), send HEX codes

07 8E A0 81

NOTE 18 – Delayed execution allows switching after a delay dictated by RS-232. To do this, the user sends instruction 7 with the "Set for delayed switch" option (64dec) before sending the switch command (instruction 1) or pressing via front panel. The switch is not executed (unless timed-out) until the "Execute delayed switch" code is sent, or the "Set for delayed switch" code is sent again. (The mode is automatically cancelled after implementation of the switch if the "execute" command is used).

For example, to connect input 4 to output 3 after a delay, send HEX codes

07 80 C0 81 (set for delayed switch)
01 84 83 81 (switch code)

then, after the required delay, send HEX codes

07 80 C1 81 (execute delayed switch)

to implement the switch.

NOTE 19 – After this instruction is sent, the unit will respond to the ASCII command set defined by the OUTPUT byte. The ASCII command to operate with the HEX command set must be sent in order to return to working with HEX codes.

NOTE 20 – When data (i.e. the INPUT and/or OUTPUT bytes) of more than 7 bits is required, instruction 63 is sent before sending the instruction needing the additional bits. The data in this instruction then becomes the Most Significant Bits of that next instruction. For example, to set the audio gain (instruction 22) of output 3 to 681dec (2A9hex), you would first send HEX codes

3F 80 85 81

and then send HEX codes

16 83 A9 81.

To set the audio gain of output 6 to 10013dec (271Dhex), first send HEX codes

3F 80 CE 81

followed by HEX codes

16 86 9D 81.

NOTE 21 – To store data in the non-volatile memory of the unit, e.g. the EEPROM for saving SETUPS. The EEPROM address is sent using the INPUT byte, and the data to be stored is sent using the OUTPUT byte. To use this instruction, it is necessary to understand the memory map, and memory structure of the particular machine.

NOTE 22 – Instruction 59 and instruction 60 load data for sending to the cross point switcher (or for storing in a SETUP), i.e. the data is “lined-up” to be executed later. Instruction 58 executes the loaded data.

NOTE 23 – If the INPUT byte is set as 127dec, then the data stored in a SETUP is loaded. The SETUP # is in the OUTPUT byte.

NOTE 24 – Further information needed in instructions 21, 22, 25 and 26, is sent using instruction 42 – which is sent prior to the instruction. For example, to request the audio gain value of right input # 9, send hex codes

2A 84 80 81

and then send HEX codes

19 89 81 81.

To set MIX mode, send hex codes

2A 81 84 81

and then send HEX codes

16

NOTE 25 – For units which detect the validity of the video inputs, Instruction 16 will be sent whenever the unit detects a change in the state of an input (in real-time).

For example, if input 3 is detected as invalid, the unit will send the HEX codes

10 83 84 81

If input 7 is detected as valid, then the unit will send HEX codes

10 87 85 81.

NOTE 26 – After this instruction is sent with OUTPUT defined OFF, the unit will not send reply to the protocol commands. In order to return to working with REPLY, this instruction must be sent with OUTPUT defined ON. In cases where there is hardware control of the REPLY, (e.g. a DIP-switch to disable replying), this instruction is only valid when the hardware REPLY is set ON.

NOTE 27 – Bit 6 in the Output byte defines direction of the switched DATA (RS-232, RS-485, RS-422). For bit 6=0 the direction of the control DATA is from Input to Output; for bit 6=1 the direction of the reply DATA is opposite - from Output to the Input.

LIMITED WARRANTY

The warranty obligations of Kramer Electronics for this product are limited to the terms set forth below:

What is Covered

This limited warranty covers defects in materials and workmanship in this product.

What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

How Long Does this Coverage Last

Seven years as of this printing; please check our Web site for the most current and accurate warranty information.

Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

What Kramer Electronics will do

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

What Kramer Electronics will not do Under This Limited Warranty

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

How to Obtain a Remedy under this Limited Warranty

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, please visit our web site at www.kramerelectronics.com or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required. You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

Limitation on Liability

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, please visit our Web site at www.kramerelectronics.com or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.



For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com where updates to this user manual may be found. We welcome your questions, comments and feedback.



Caution

Safety Warning:

Disconnect the unit from the power supply before opening/servicing.



P/N: 2900-000532



Rev: 3



Kramer Electronics, Ltd.

Web site: www.kramerelectronics.com

E-mail: info@kramerel.com

P/N: 2900-000532 REV 3